


RV USER QUICK REFERENCE

V 2019.04

TIPS

Anytime, if you feel not confident to operate the trailer by yourself, please do not hesitate to ask Campground management for help. PLEASE CALL 403-971-2228 / 403-891-6180 or Walk to office directly.

1. PROPANE

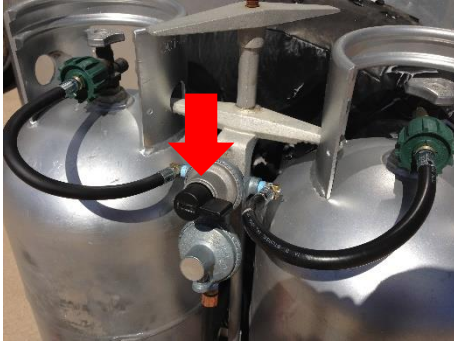

The trailer is equipped with two large propane tanks, which usually last for one to two weeks. **If there is no fuel during the stay, please ask campground management to switch tanks.** If you are want to try by yourself, the procedure is 1) remove the white gas tank cover; 2) turn off the empty tank valve; 3) turn the central switch to the opposite side; 4) turn on the new tank and put the safety cover back.

2. CONTROL PANEL



The panel allows you to check the approximate levels of the fresh water tank, the black water (toilet waste), grey water tank (sink and shower waste), and propane tank. You can also check the condition of the battery; turn on the water pump and water heater, etc. To check the amount of water available in the fresh water tank, push that switch/button and hold. There are sensors at different levels of the tank to indicate where the fluid level sits. For example, if the tank is 2/3 full, the E, 1/3 and 2/3 lights will light up.

HOT WATER SWITCH

The water heater switch is on the control panel too. The electric water heater defaults on. The propane water heater switch defaults off. **Please Keep the way as this.** The hot water tank has limited capacity for only one person taking shower. Please allow 15-20 min heating time for the second person taking shower, or use the campground public shower facilities.

3. SEWER & TOILET



Each trailer connects with city water, so water is constantly supplied at no restrictions. The trailer has two waste water tanks: grey water tank, and black water tank. The grey water tank collects the wastewater from the kitchen, bathroom sink and shower. The black water tank collects from the toilet.

The valves of two tanks are generally located on at the lower part of the rear of the RV. Please keep both tanks at the closed position at all time. When the tank is full or almost full, please release the valves, let them drain and turn back off. Please release the black water tank first, and then release the grey water tank.

The flush lever of the toilet is either a foot pedal or on the side, behind the lid. Before using the toilet, fill the toilet about 1/4 full with fresh water. Add one packet of toilet chemical into the toilet and flush it down. Please repeat this process every time you empty your black water tank.

Here are some tips to use the toilet:

- Always flush with plenty of water when using the toilet;
- ONLY use toilet paper;
- Never pour grease or oil, coffee grounds, or other food waste down the toilet or sinks.

4. LIGHT THE STOVE



Your trailer is equipped with a portable lighter. Hold the lighter in one hand, pull the trigger to produce a flame. Turn knob to lite position and hold knob in until the gas ignites.

5. THERMOSTAT



Manual Thermostat



Automatic Thermostat

The trailer is equipped with either type of thermostat (auto or manual, refer to above pictures).

For the manual thermostat, turn on system to COOL (A/C) or Furnace. Keep Fan button to ON. Use the rod to set the temperature.

For the auto thermostat, please press the on/off button and then keep pushing to select the mode: A/C or furnace. Use the up and down arrow buttons to set the temperature.

6. SAFETY ALARM



Each trailer comes with a CO / smoke detector to protect your safety.

Caution PLEASE KEEP IT ON ALL THE TIME. DO NOT TURN THE BATTERY OFF.

If you hear an alarm, please evacuate from the unit immediately, and report to Campground Management for an investigation. Please do not return back into the trailer unless Campground Management indicates safe to do so.

7. POWER OUTLET

The 110-volt outlets in the bathroom and kitchen are protected by a Ground Fault Circuit Interrupter. This device is intended to protect you against the hazards of electrical shock when using electrical appliances.



If the power is on and there is no current, push the RESET button at the center of the GFCI outlet.

8. FRIDGE/FREEZER



Please keep the ON/OFF button to ON, and the operating model on AUTO, which means it will pick electricity as primary source of power; in the case of no power, it could automatically switch to propane source to keep it cool. If you find the fridge / Freezer does NOT work properly, please ask Campground Management for support.